

96 Deep Well Plate Filling and Sealing Machine




Requirements:

1. One machine work for 5 solutions
2. Automatic feeding plates
3. Automatic filling reagents/magnetic beads
4. Automatic seal plate
5. Automatic stick label


96 Deep Well Plate Filling and Sealing Machine

Filling requirement


Type solution №1

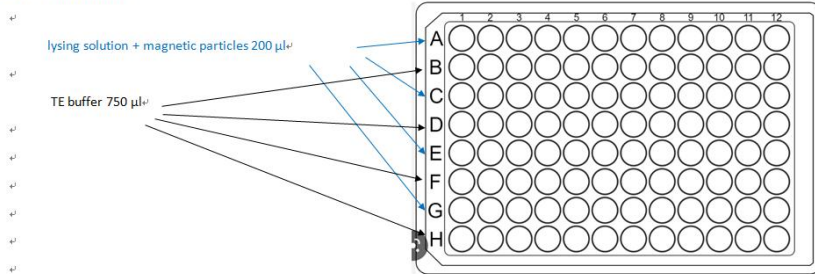


Type solution №5

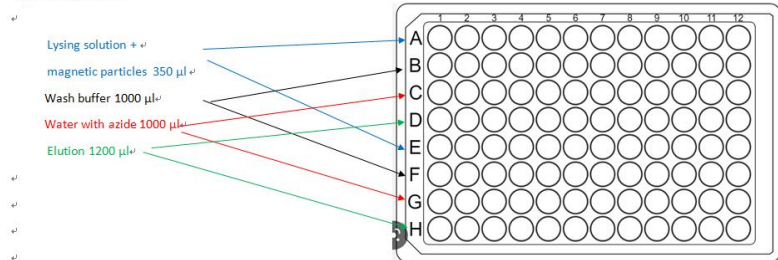


Type solution №2

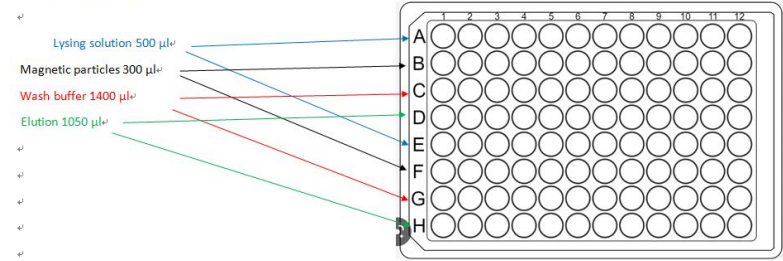

Type solution №3




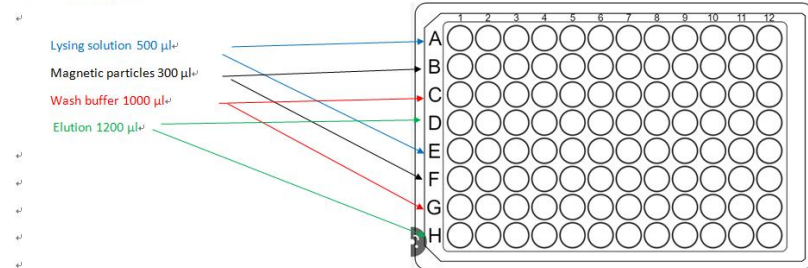


Type solution №4

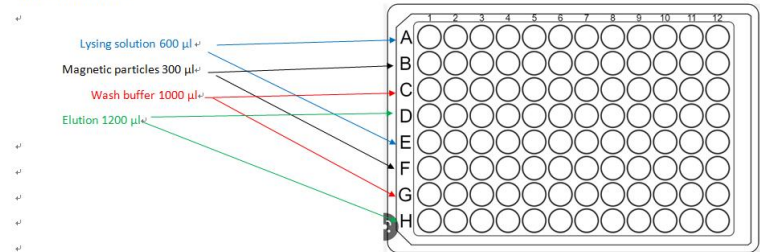

96 Deep Well Plate Filling and Sealing Machine



Overview

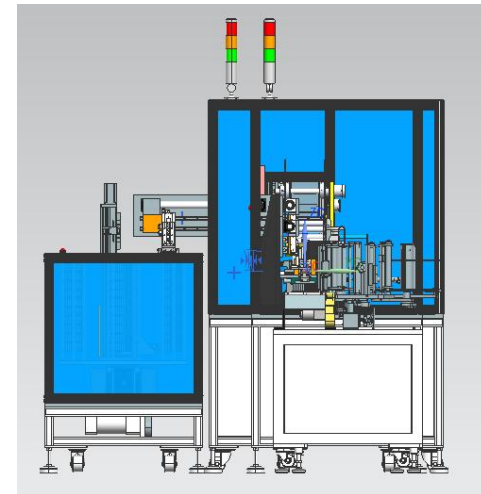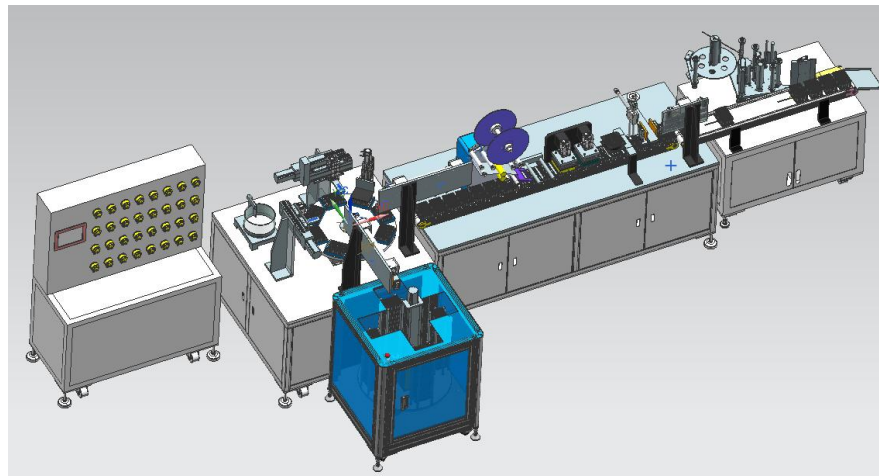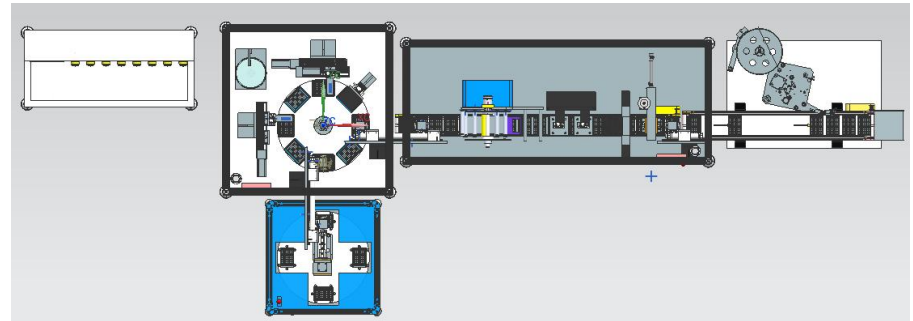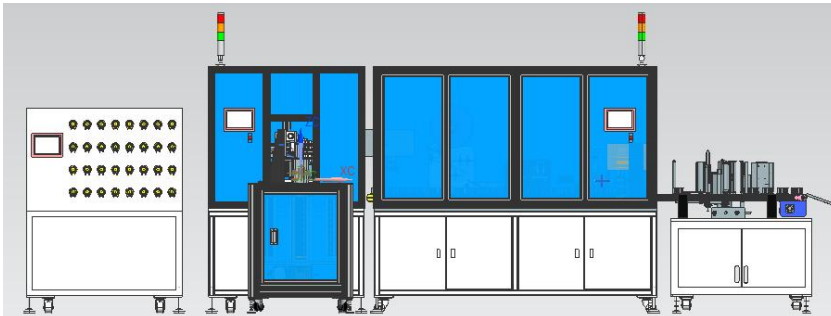

96 Deep Well Plate Filling and Sealing Machine


Dimension

L:5,800 * W1,900 * H2,150(mm)

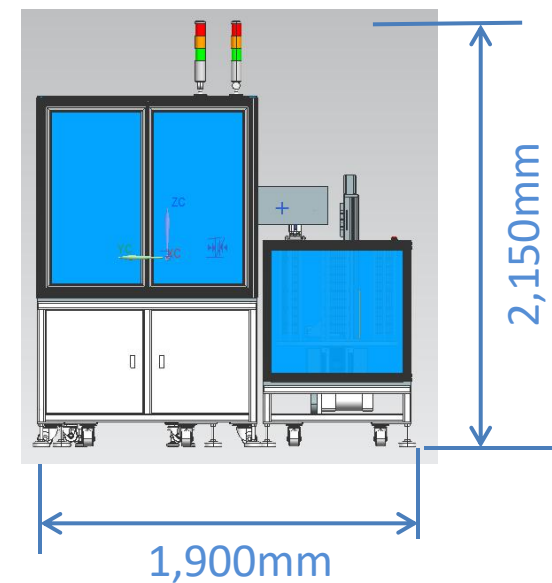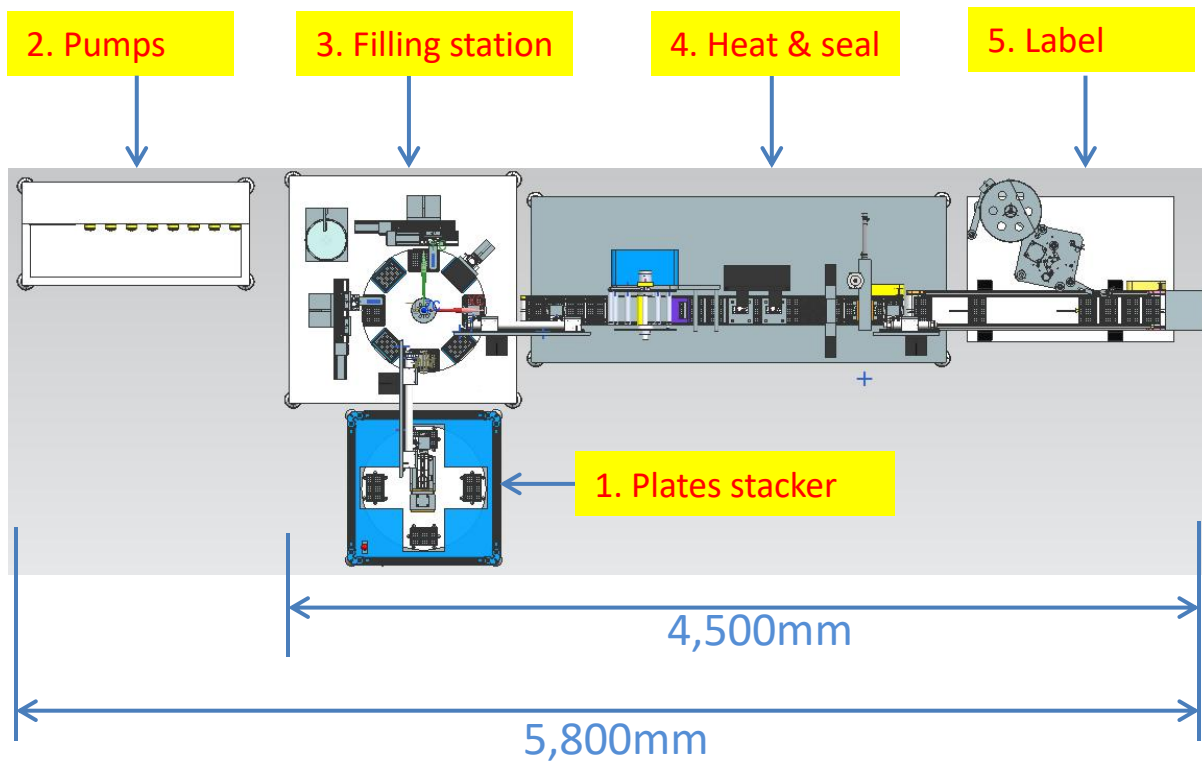


96 Deep Well Plate Filling and Sealing Machine

Workstations

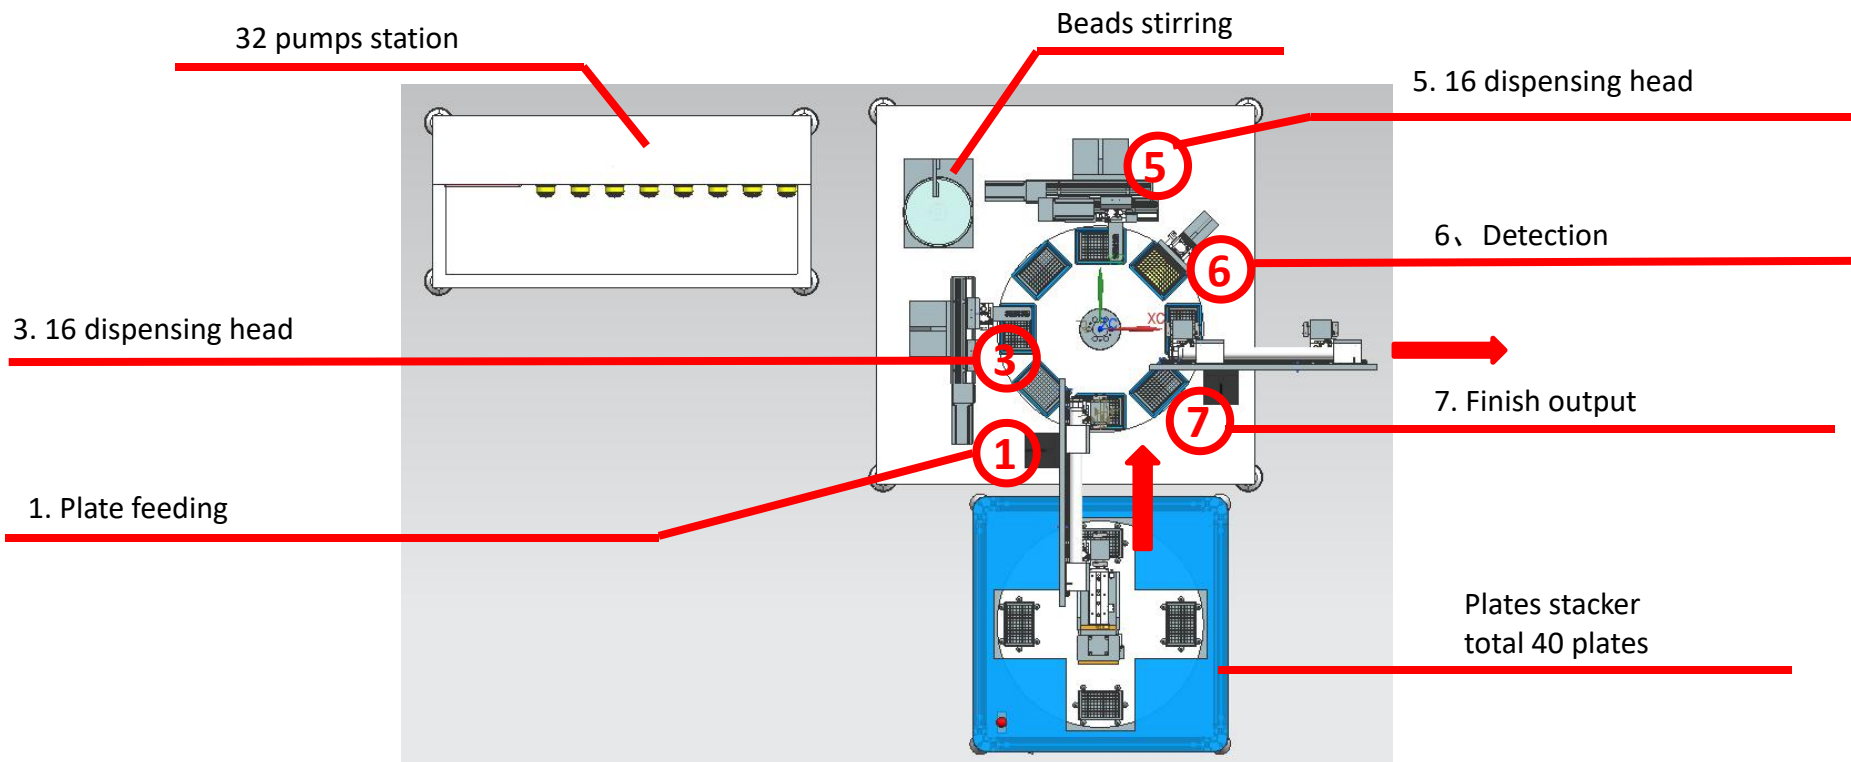


96 Deep Well Plate Filling and Sealing Machine

Heat & seal station

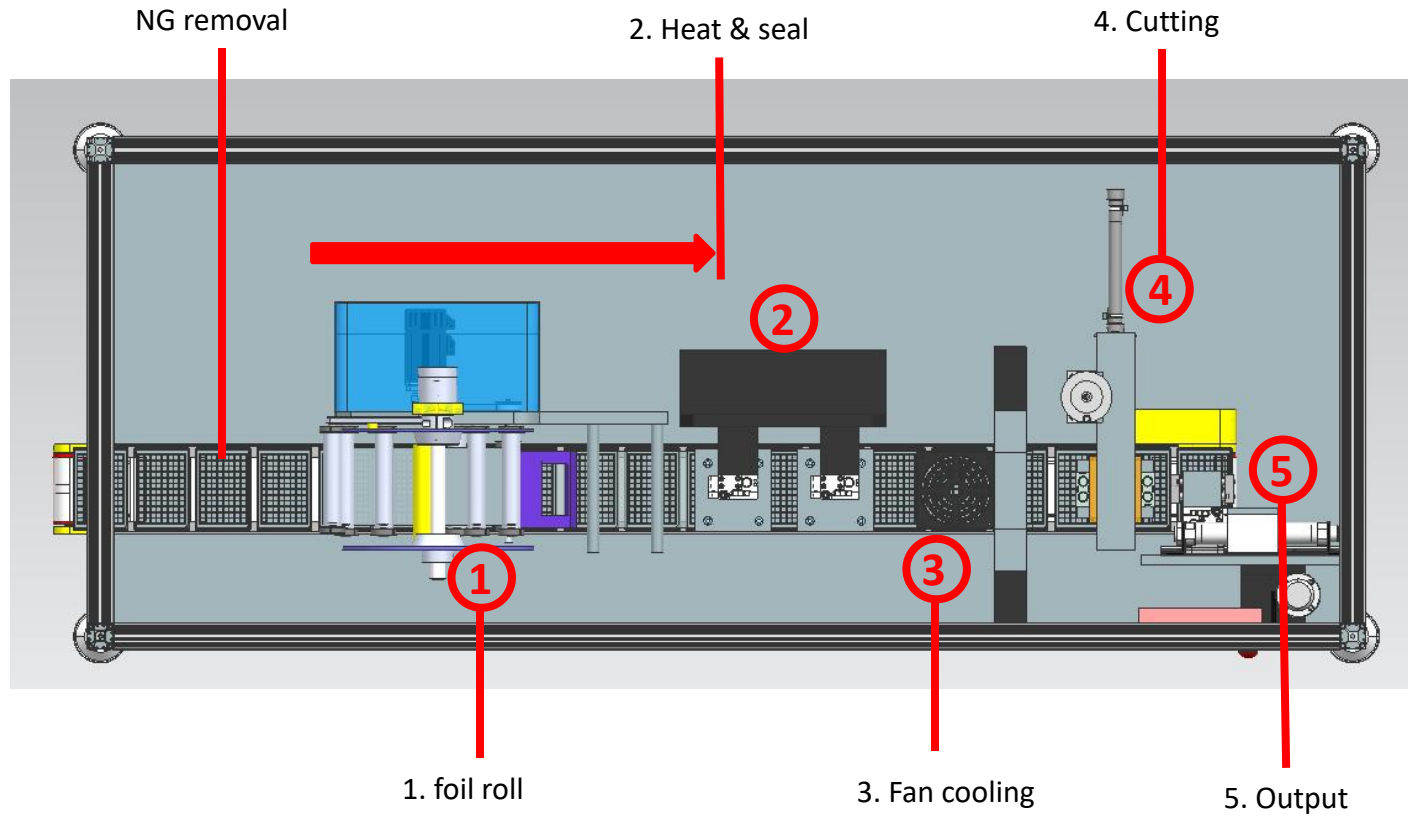

96 Deep Well Plate Filling and Sealing Machine

Label station

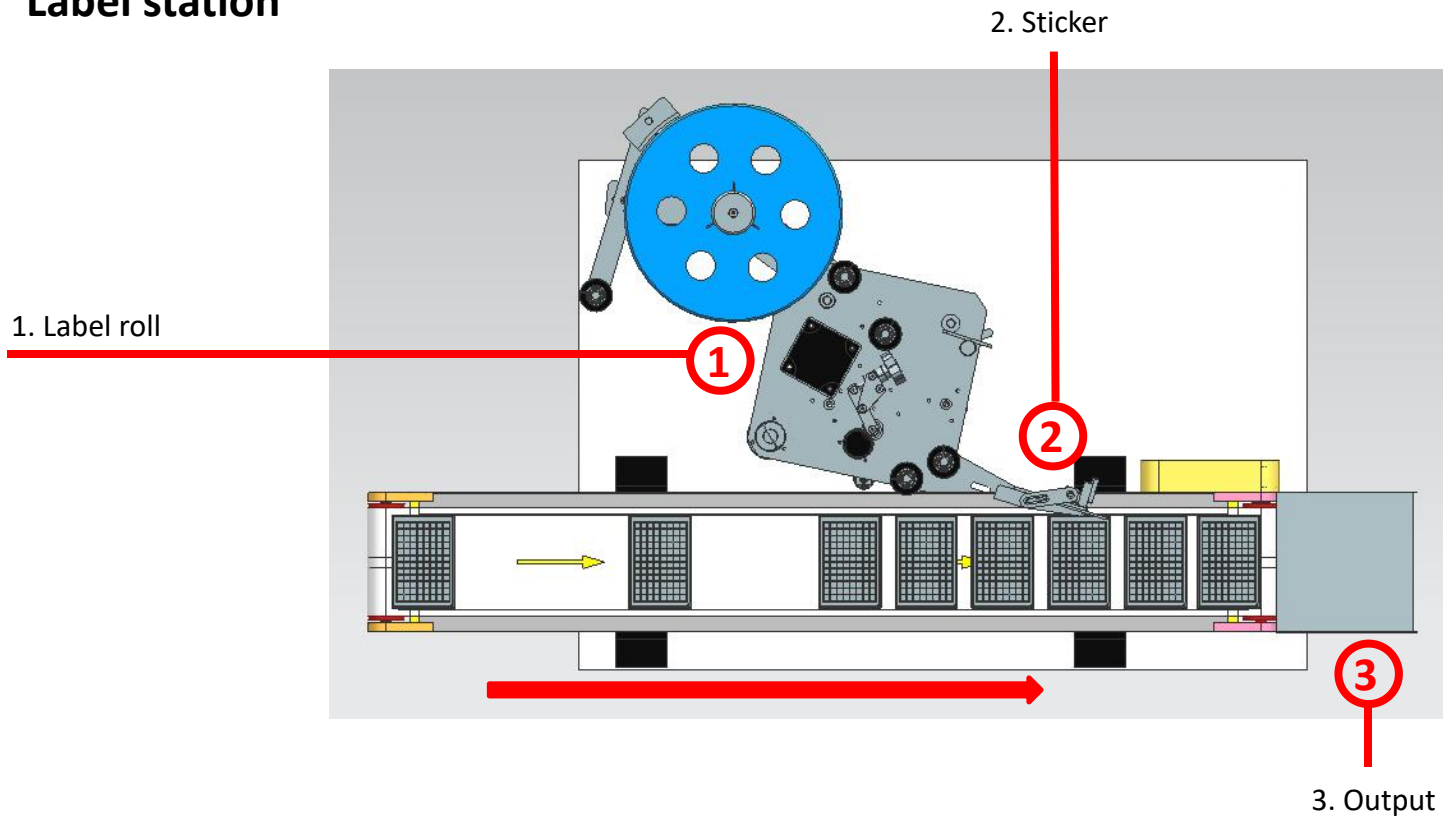

96 Deep Well Plate Filling and Sealing Machine

Features:

1. touch screen
2. capacity 450 ~ 600 plates/hour
3. total 32 pumps, 5% accuracy
4. NG product removal
5. Module design
6. Easy to run and maintenance

Operation:

1. connect with air supply and power supply
2. place plates into stacker
3. prepare reagents/magnetic beads
4. place foil roll
5. place label roll
6. release e-stop
7. turn on machine
8. wash tubes
9. start running

96 Deep Well Plate Filling and Sealing Machine

Parameter	
Capacity	450~600 plates/hour
Activation	85%
Plates feeding	stacker
Air supply	0.6~0.8MPa
Power supply	AC220V/50HZ
Internal power supply	DC/24V
Power	约14.0KW
Weight	1,900kg
Dimension	L5.8 * W1.9 * H1.8m(LWH)
Packing dimension	L6.2 * W 2.4 * H2.2(m)

Remark: all data will be changed according to design

96 Deep Well Plate Filling and Sealing Machine

Key components	
PLC	Mitsubishi/Panasonic
Operation system	ANTITECK
Servo	Inovance/KNK
Relay	Schneider/CHNT
Sensor	OMRON/Panasonic
Cylinder	SMC/AIRTAC
Solenoid valve	SMC/AIRTAC
Connector	SMC/AIRTAC